
STRAIGHT (I type) • ADAPTER

≪ABSTRACT≫

- ◆This is the staraight(I type) adapter for the LEMO,BNC,SMA and N type.
- ◆Please contact us about the type,price etc of no information in this document.
 R: receptacle

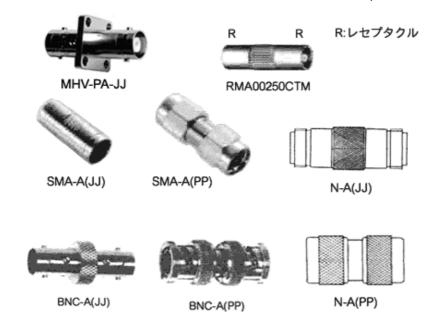

◆The symbol (P),(J) used as connector names for BNC etc is that J means a jack which typically used to mount on panels P means a plug which typically used to attach to co-axial cable.

plug (P) jack (J)

プラグ (**P)** ジャック (J)



9-18 HIGASHIMATSUBARA HAKONEGASAKI MIZUHOMACHI NISHITAMAGUN TOKYO 190-1222 JAPAN

Tel: 042-568-0866 Fax: 042-568-0867

E-mail kaizuwks@kaizuworks.co.jp Homepage http://www.kaizuworks.co.jp