

## CAMAC TO NIM EXTENDER



## 《ABSTRACT》

- ◆ This module is used to take the other NIM module in CAMAC crate outside when the adjustment and repairing is needed.
- ◆ The power source is supplied from the CAMAC crate and the equipment corresponding to it.
- ◆ The power source supplied to NIM module is used 1m extension cable with NIM standard connector.
- ◆ 1A fuse is used in each line of  $\pm 24V$ 、 $\pm 6V$ , respectively.



KAIZUWORKS CORPORATION  
9-18 HIGASHIMATSUBARA HAKONEGASAKI MIZUHOMACHI  
NISHITAMAGUN TOKYO 190-1222 JAPAN

Tel : 042-568-0866 Fax : 042-568-0867

E-mail [kaizuwks@kaizuworks.co.jp](mailto:kaizuwks@kaizuworks.co.jp) Homepage <http://www.kaizuworks.co.jp>